
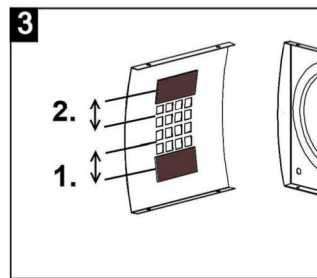
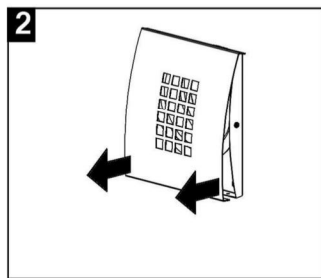
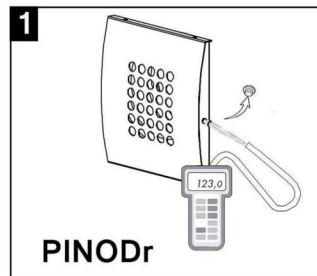


ИНСТРУКЦИЯ ПО НАСТРОЙКЕ

$$q_v = k \times \sqrt{\Delta p_m}$$

PINODq				k		
				100	125	160
				5*4=20	6*4=24	8*6=48
A				2,5	3,1	6,2
Suljettu riviä Stängda rad Closed rows	1	2,0	2,6	5,4		
	2	1,5	2,1	4,7		
	3	1,0	1,5	3,9		
	4	0,5	1,0	3,1		
	5		0,5	2,3		

PINODr				k		
				100	125	160
				6*4=24	6*5=30	8*7=56
A				2,5	3,0	5,7
Suljettu riviä Stängda rad Closed rows	1	2,1	2,5	5,0		
	2	1,7	2,0	4,3		
	3	1,2	1,5	3,5		
	4	0,8	1,0	2,8		
	5		0,5	2,1		

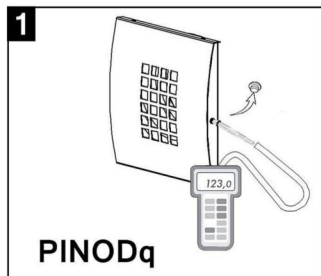

HUOLTO-OHJE ● SKÖTSELANVISNING ● MAINTENANCE

РУКОВОДСТВО ПО ТЕХНИЧЕСКОМУ ОБСЛУЖИВАНИЮ

