

PARAGON AWC

Installation – Commissioning – Maintenance

23/12/2024
Art. 942428072

Contents

Application area.....	2
General.....	2
Contents.....	2
Protective equipment.....	2
Electrical safety.....	2
Handling.....	2
Installation.....	2
Cleaning.....	2
Cleaning of electrical components	2
Service/maintenance	2
Environment and waste disposal	2
Product warranty	2
Dimensions and weight.....	3
Installation	4
Size of the opening.....	4
Suspension	5
Connection - Water	7
Connecting water	7
Water quality	8
Connection - air.....	8
Supply and extract air kit	9
Supply air kit.....	9
Extract air kit	9
Installation, grille.....	10
Connections control equipment	11
Room controller, LOCUS.....	13
Sensor module.....	14
Recommendation for electrical installations ..	15
Description of problem:	15
How is the voltage drop in the cable calculated:	15
Maintenance.....	16

The document refers to version "d"

Symbols

Warning/Caution!



See also the following documents at www.swegon.com:

- PARAGON AWC Product datasheet
- VAV Modbus
- Comfort modules operation and maintenance (IOM)
- LOCUS Product datasheet
- LOCUS Instructions for Use (IOM)

Application area

The product is a comfort module designed for demand-controlled climate indoors.

The product is used to ventilate, cool and heat premises exactly as needed.

The product may not be used for anything other than its intended use.



General

Read through the entire instructions for use before you install/use the product and save the instructions for future reference. It is not permissible to make changes or modify this product other than those specified in this document.

Contents

1 x PARAGON AWC

1 x Instructions for use



Protective equipment

Always use appropriate personal protective equipment for the work in question, in the form of gloves, respirators, protective glasses and helmets during handling, installation, cleaning and service/maintenance.



Electrical safety

Permitted voltage, see Electrical data.

It is not permissible to insert foreign objects into the product's contactor connections or ventilation openings; risk for short circuiting.

24 V isolation transformer to be connected should comply with the provisions of IEC 61558-1.

Cable sizing must be carried out for cabling between the product and the power supply source.

Disconnect the power supply when working on products that are not required to run.

Always follow the local/national rules for who shall be permitted to carry out this type of electrical installation.

Handling

Always use appropriate transport and lifting devices when the product is to be handled to reduce ergonomic loads.

The product must be handled with care.

Installation

- Moist, cold and aggressive environments must be avoided.
- Assemble the product according to this instruction and applicable industry regulations.
- Install the product for easy access during service/maintenance.
- Avoid installing the product near a heat source.
- Check to make sure that the product does not have any visible defects.
- Check that the product is properly secured after it has been installed.
- Secure cables with cable ties.
- Check that all cables are properly secured in place after installation.

Cleaning

Ideally the product should be cleaned twice a year by vacuuming the coil to remove loose dust.

In fibre-dense environments such as hotels, an initial cleaning is recommended, about three months after use, as new textiles usually release more fibres. Thereafter, cleaning is recommended at an interval of one to two times per year.

A simple visual inspection of connections is recommended when cleaning.

For cleaning grilles and other painted surfaces: Avoid aggressive cleaning agents which may harm painted surfaces. Normally a mild soap or alcohol solution is fully adequate for cleaning. See also the maintenance section.

Cleaning of electrical components

- If needed, use a dry cloth to clean the components.
- Never use water, detergent and cleaning solvent or a vacuum cleaner.

Service/maintenance

- In connection with a service, mandatory ventilation inspection or cleaning of the ventilation system, check that the general condition of the products looks ok. Pay particular attention to the suspension, cables and that they sit firmly in place.
- It is not permissible to open or repair electrical components.
- If you suspect that the product or a component is defective, please contact Swegon.
- A defective product or component must be replaced by an original spare part from Swegon.

Environment and waste disposal

Help to protect the environment by ensuring correct disposal of the packaging and use the products in accordance with applicable environmental regulations.

Product warranty


The product warranty or service agreement will not be in effect/will not be extended if: (1) The product is repaired, modified or changed, unless such repair, modification or change has been approved by Swegon AB; or (2) the serial number on the product has been made illegible or is missing.

Dimensions and weight

Weight


PARAGON AWC 800

Length	Type	Dim.	Dry weight* (kg)		Water volume (l)	
mm		Ø	Without grille	incl. grille	cooling	heating
800 R	A	125	14.0	16.9	1.39	
800 L	A	125	14.0	16.9	1.38	
800 R	B	125	14.0	16.9	1.39	0.38
800 L	B	125	14.0	16.9	1.38	0.37
800 R	X	125	14.0	16.9	1.39	
800 L	X	125	14.0	16.9	1.38	

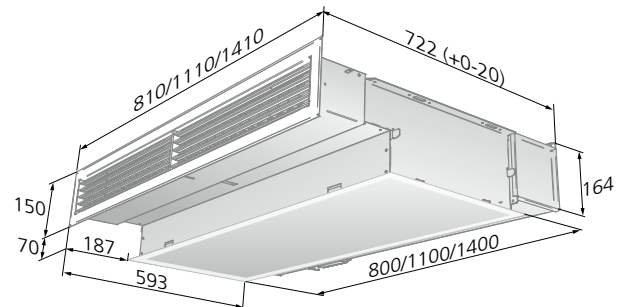

PARAGON AWC 1100

Length	Type	Dim.	Dry weight* (kg)		Water volume (l)	
mm		Ø	Without grille	incl. grille	cooling	heating
1100 R	A	125	18.8	22.6	1.93	
1100 L	A	125	18.8	22.6	1.92	
1100 R	B	125	18.8	22.6	1.93	0.52
1100 L	B	125	18.8	22.6	1.92	0.51
1100 R	X	125	18.8	22.6	1.93	
1100 L	X	125	18.8	22.6	1.92	

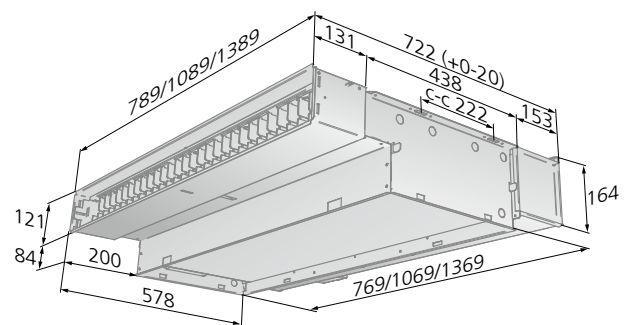







PARAGON AWC 1400

Length	Type	Dim.	Dry weight* (kg)		Water volume (l)	
mm		Ø	Without grille	Incl. grille	cooling	heating
1400 R	A	125	23.0	27.6	2.47	
1400 L	A	125	23.0	27.6	2.46	
1400 R	B	125	23.0	27.6	2.47	0.65
1400 L	B	125	23.0	27.6	2.46	0.64
1400 R	X	125	23.0	27.6	2.47	
1400 L	X	125	23.0	27.6	2.46	


*Added weight for:
Control equipment: 0.84 kg

Installation



Size of the opening

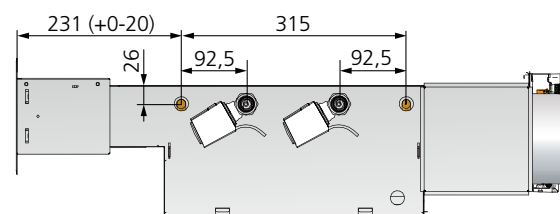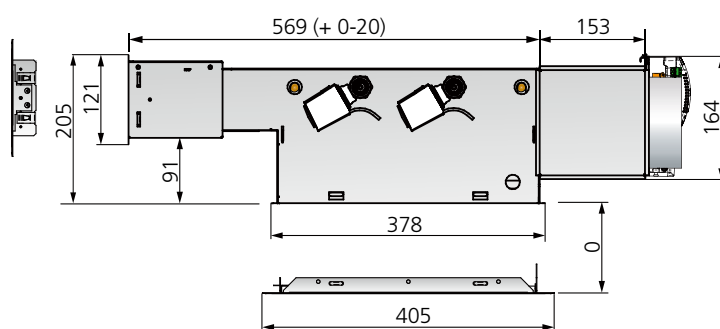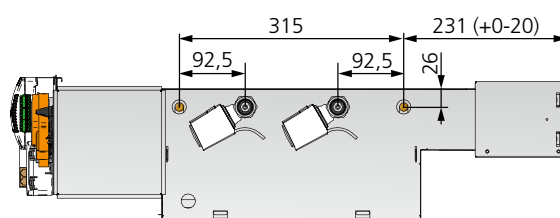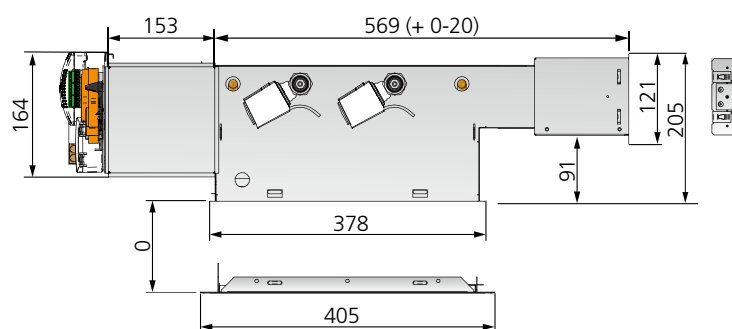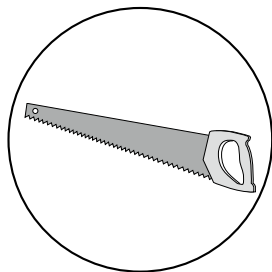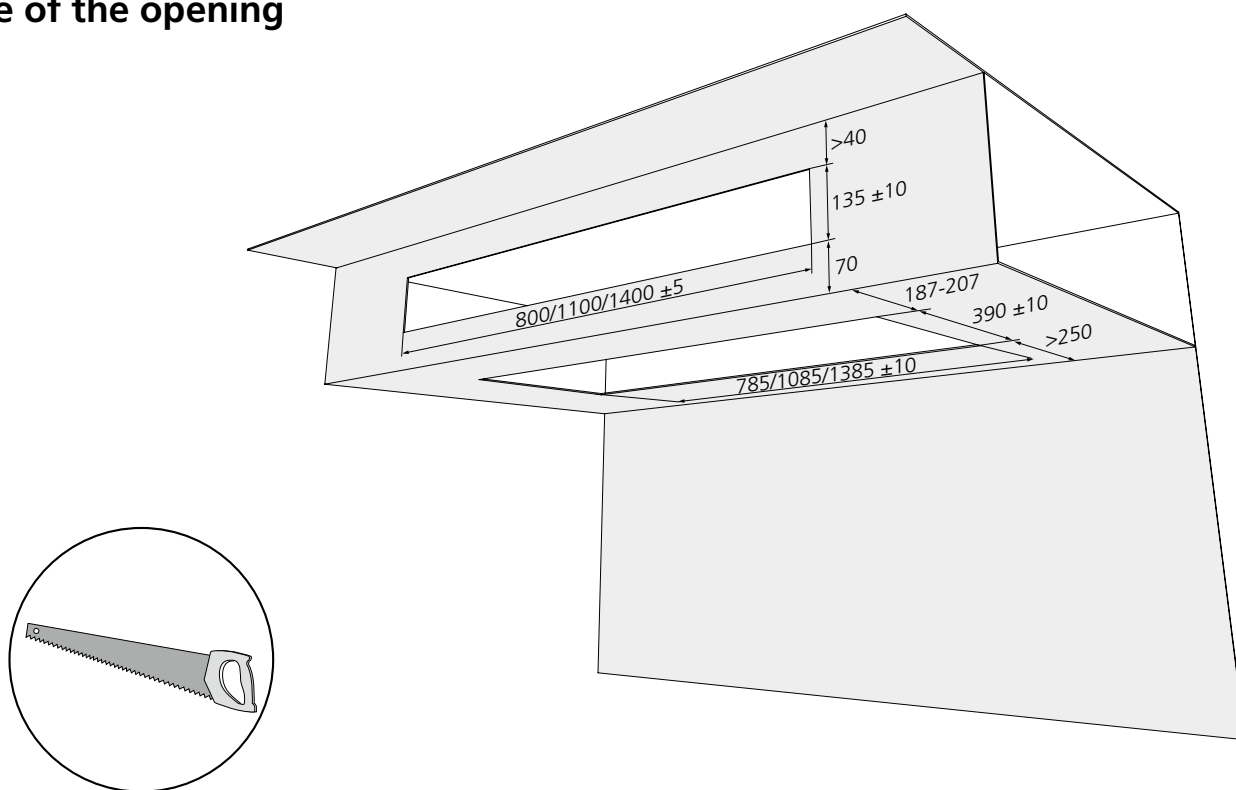


Suspension

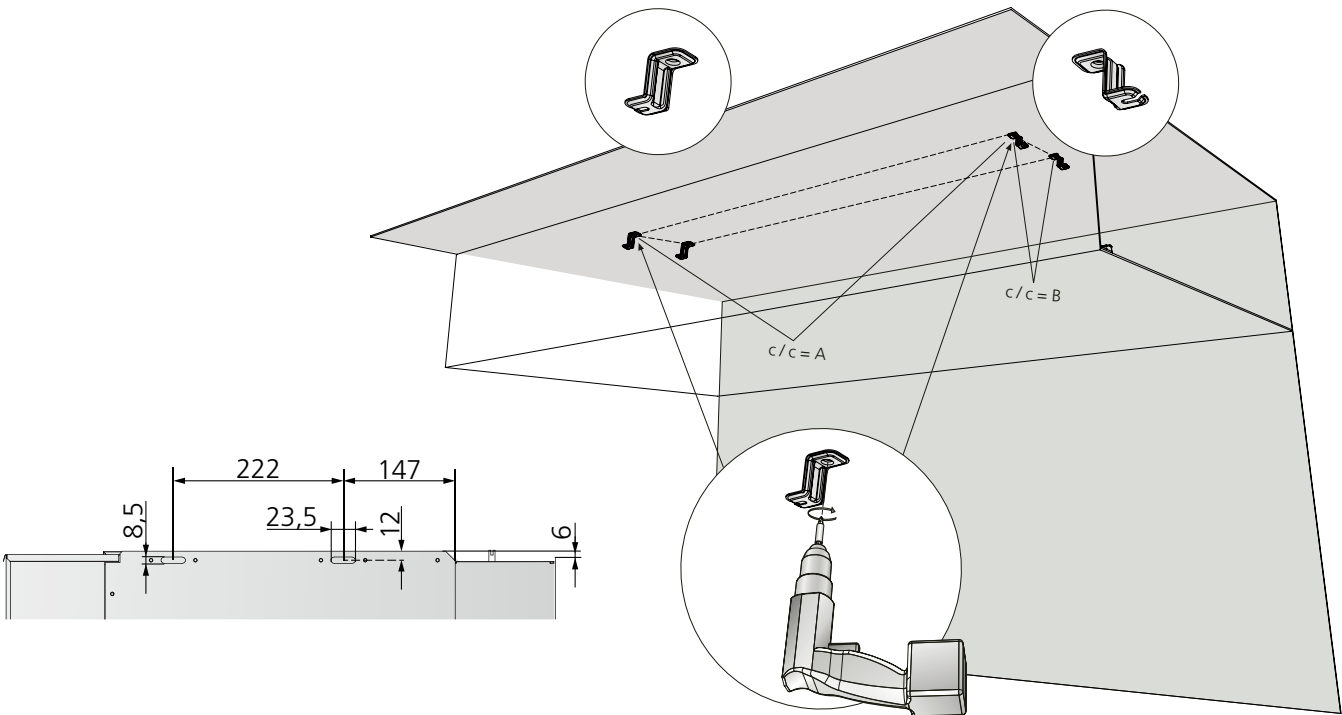

L	A	B
800	778	222
1100	1078	222
1400	1378	222

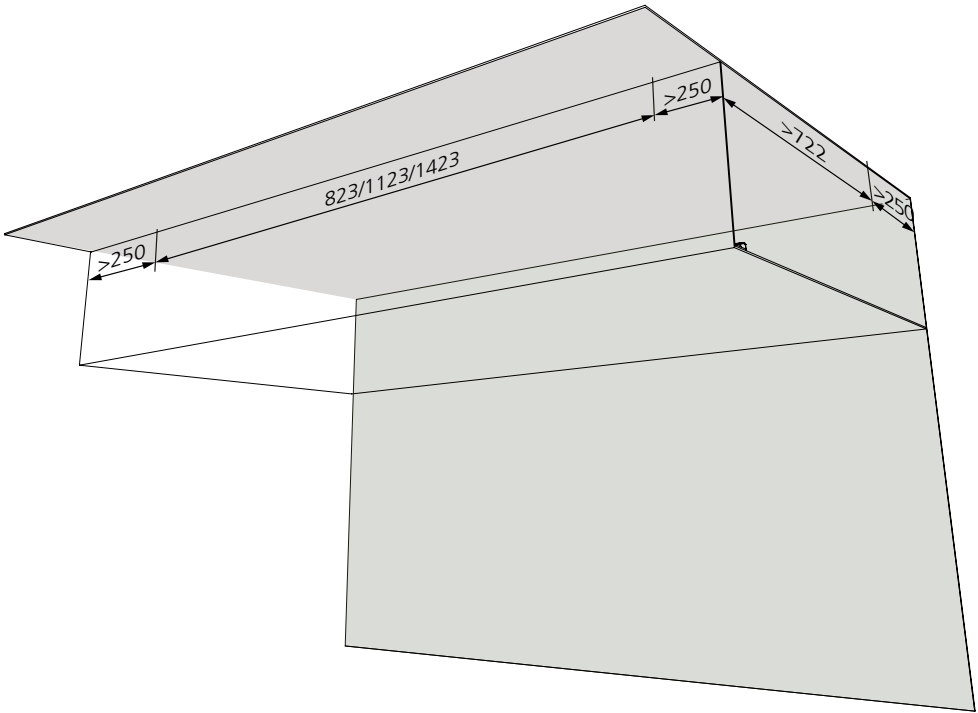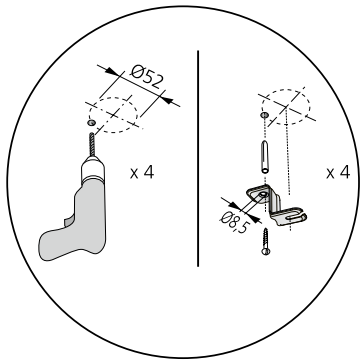

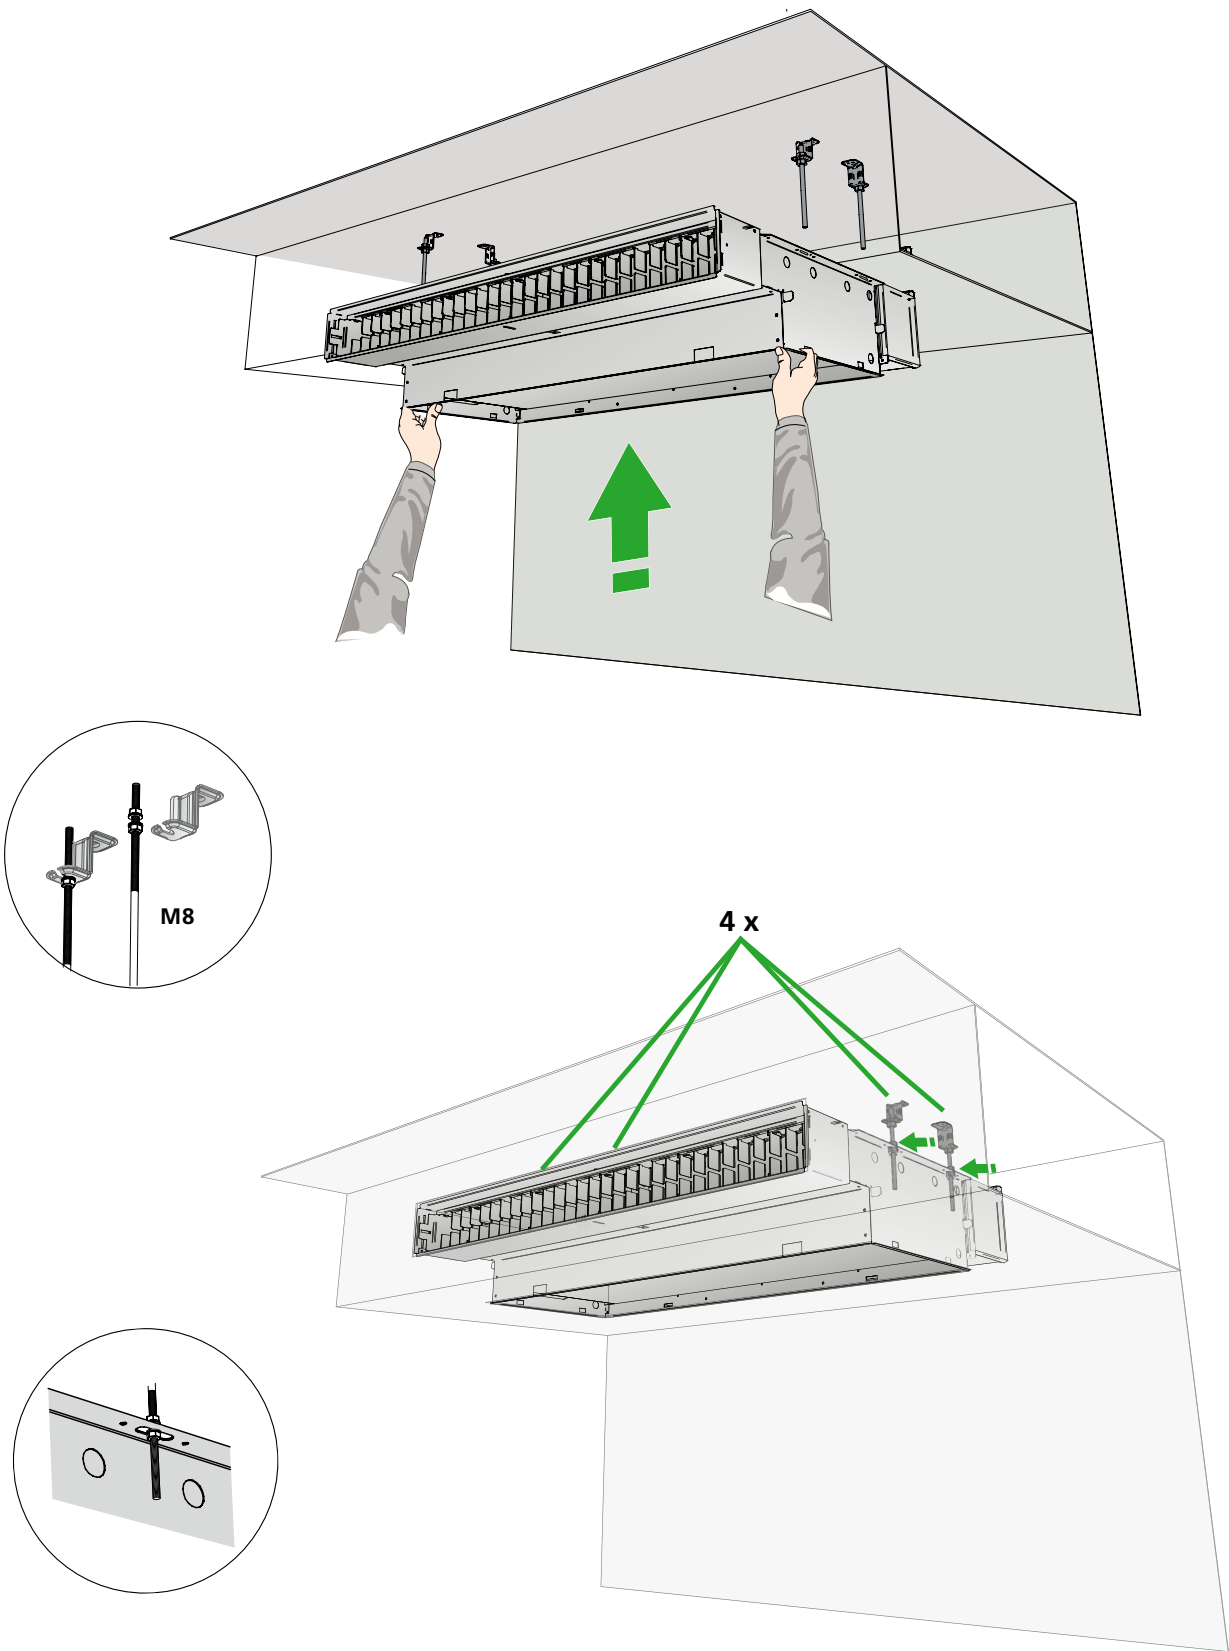

Connection - Water


Connection sizes

Standard variant with factory-fitted valves:

Length	Cooling	Heating
(mm)	Return	Return
800, 1100, 1400	DN15 male thread	DN15 male thread

Standard variant without factory fitted valves:

Length	Cooling	Heating
(mm)	Supply and return	Supply and return
800, 1100, 1400	plain pipe ends	plain pipe ends
	(Cu) Ø 12 x 1.0 mm	(Cu) Ø 12 x 1.0 mm

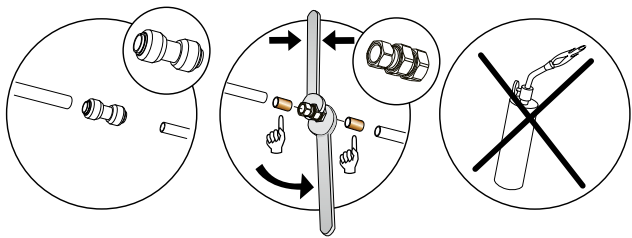


Note that compression ring couplings require support sleeves inside the pipes.

Connecting water


Connect the water pipes using push-on couplings or compression ring couplings.

Note that compression ring couplings require support sleeves inside the pipes. Do not use solder couplings to connect the water pipes. High temperatures can damage the unit's existing soldered joints.

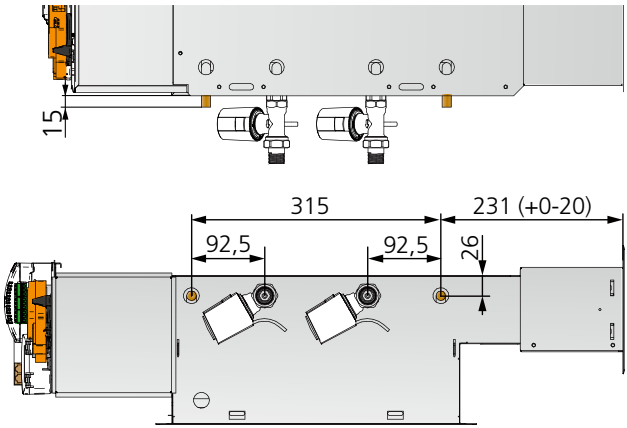


Water connection on the right-hand side "R"

Cooling and heating R. all sizes

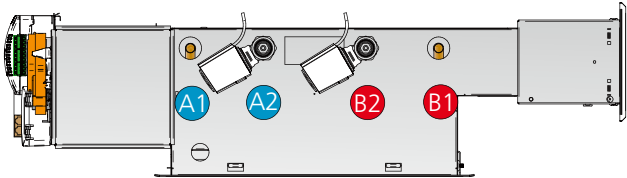

Cooling R, all sizes

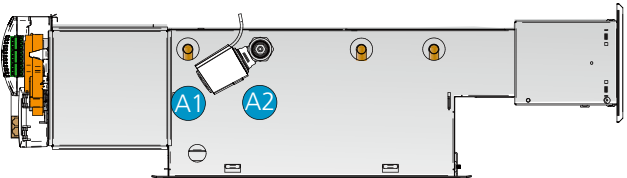


Water connection on right-hand side (R).


A1 = Cooling water, supply
A2 = Cooling water, return
B1 = Heating water, supply
B2 = Heating water, return

Water connection on the left-hand side "L"

Cooling and heating L. all sizes

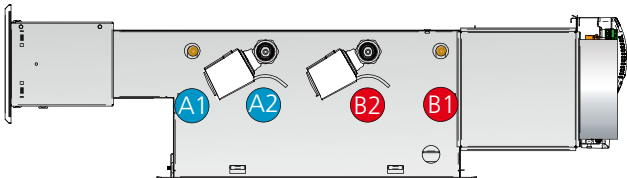


Cooling L, all sizes

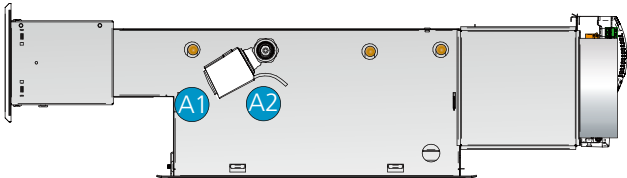

Water connection on left-hand side. (L).


A1 = Cooling water, supply
A2 = Cooling water, return
B1 = Heating water, supply
B2 = Heating water, return

Water connection at the rear edge "WB"

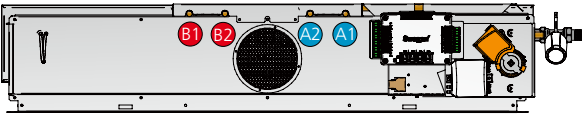

Water connection at the rear edge (WB).
A1 = Cooling water, supply
A2 = Cooling water, return
B1 = Heating water, supply
B2 = Heating water, return

Connection of CCO valve

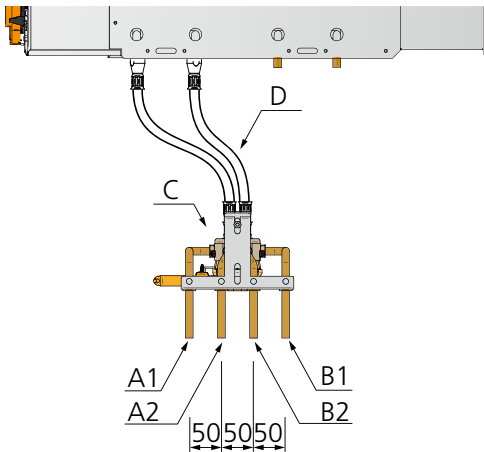

Water connection with CCO valve.
A1 = Cooling water, supply C = CCO valve
A2 = Cooling water, return D = Flexible hose
B1 = Heating water, supply
B2 = Heating water, return

Water quality

Swegon recommends water quality according to VDI 2035-2 for both the heating and cooling systems. In order to maintain the oxygen content in the water below the levels (<0.1 mg/l) prescribed in VDI 2035-2, it is recommended to install a vacuum degasser, particularly in the cooling system where it's more challenging to dissolve gas. It is also important that the pre-pressure in the expansion vessel is dimensioned according to EN-12828 for both the heating and cooling systems and that regular checks are made of the pre-pressure. The cooling and heating systems must be designed to prevent oxygen from entering the system, this is particularly important to consider when selecting flex hose, pipes and expansion vessels.


When the system is filled with fresh water, it has an oxygen content of approximately 8 mg/l, however, this oxygen is consumed quickly through corrosion processes and within a few days the oxygen in the water should be consumed. Nevertheless, it is important to avoid filling the system with fresh water unnecessarily.

Automatic deaerators are often installed to facilitate filling of the system. It is recommended that the automatic deaerators are turned off once the system has been fully vented to avoid these drawing in air in the system if the pre-pressure in the expansion vessel should drop.


Connection - air

All variants have the air connection Ø125.
The standard variant has the air connection centred at the rear of the product for easy access from both ends and the rear.
The suite version, which is only available in 1400 mm length, has two parallel air connections at the rear, i.e. 2x Ø125.

Standard, Rear view

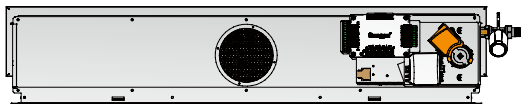


Suite, Rear view

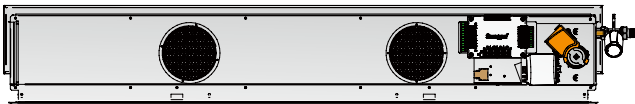


Connection dimensions, air

Variant	Length	Air connection	
	(mm)	1 x Ø 125	2 x Ø 125
1: Standard	800, 1100, 1400	Yes	No
2: Suite	1400	No	Yes



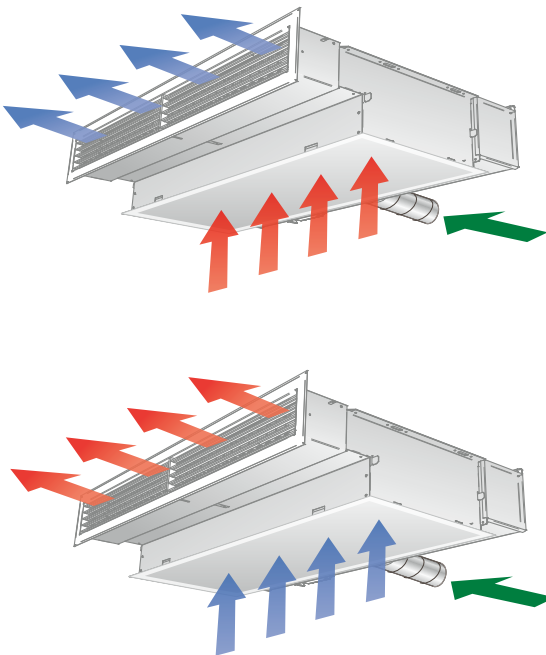


Supply and extract air kit


Supply air kit

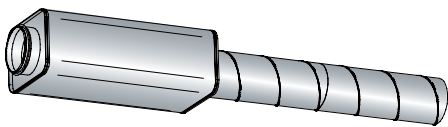

Extract air kit

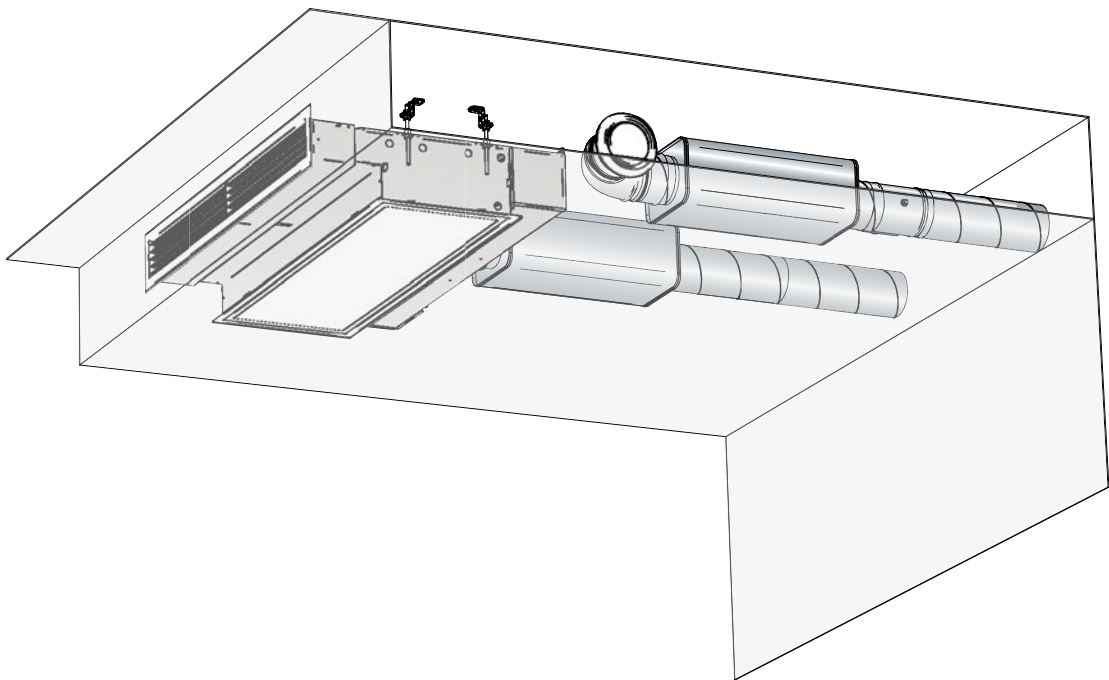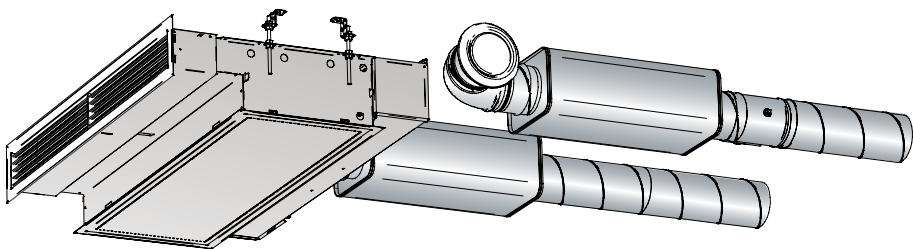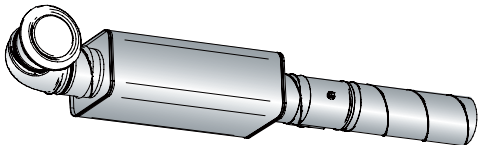


Installation, grille

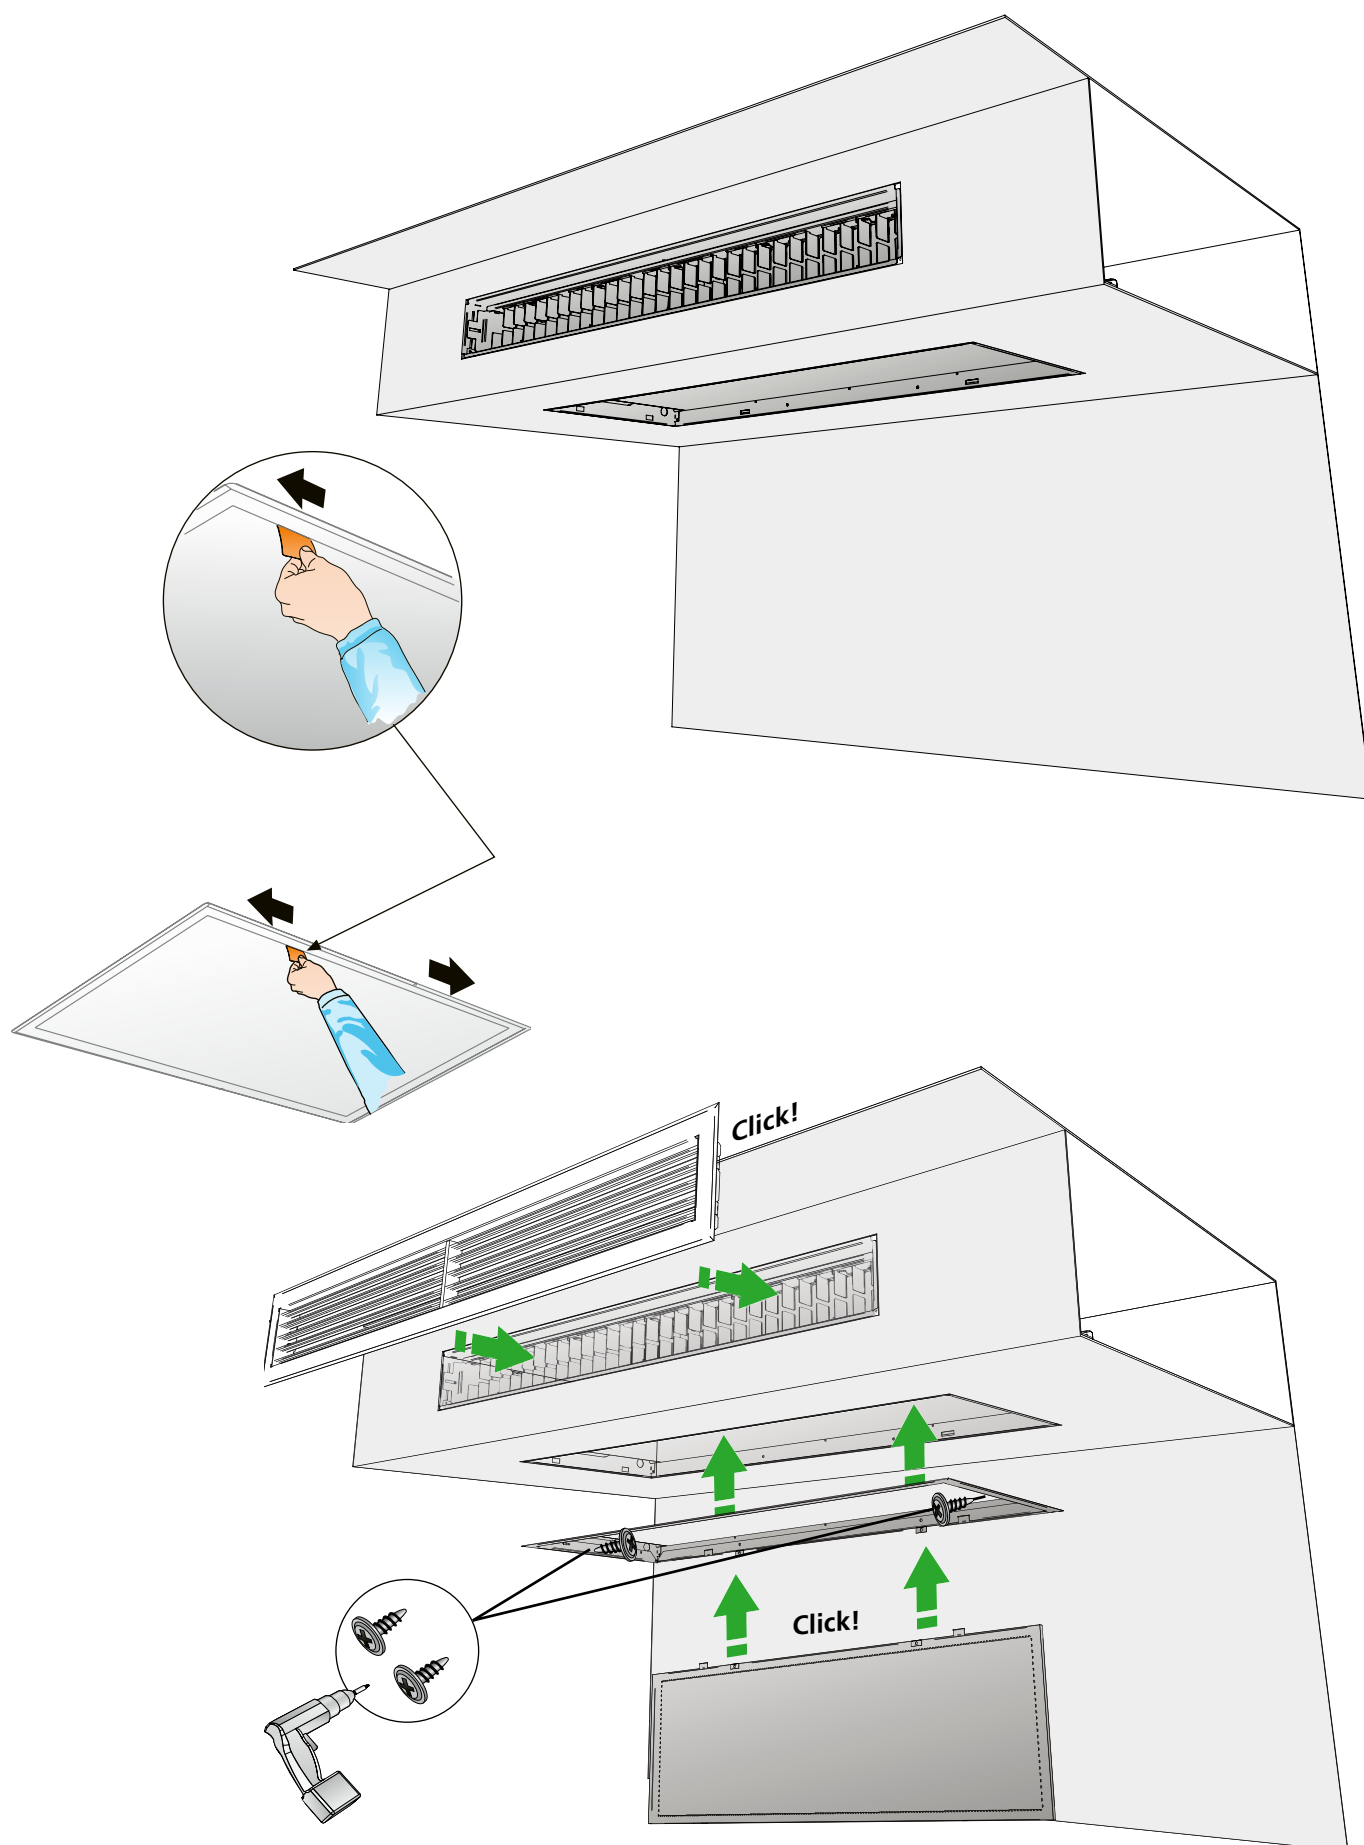



Connections control equipment

Wiring diagram for controller (URC1) with accessories

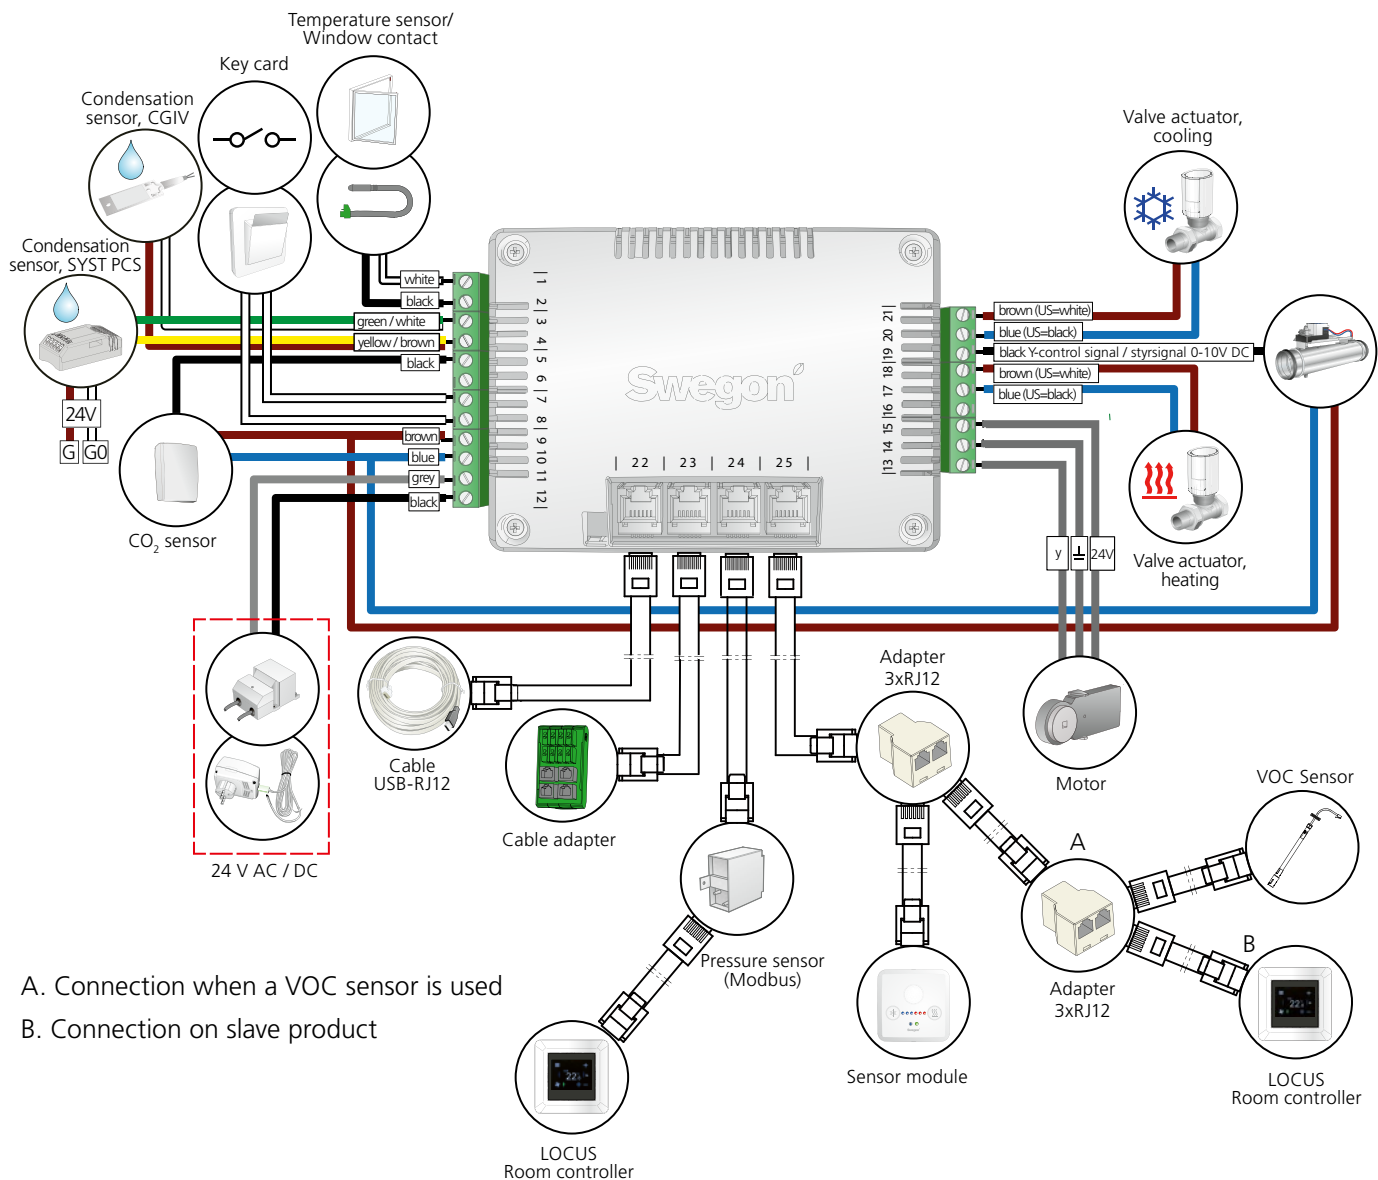

A. Connection when a VOC sensor is used
B. Connection on slave product


Controller outputs

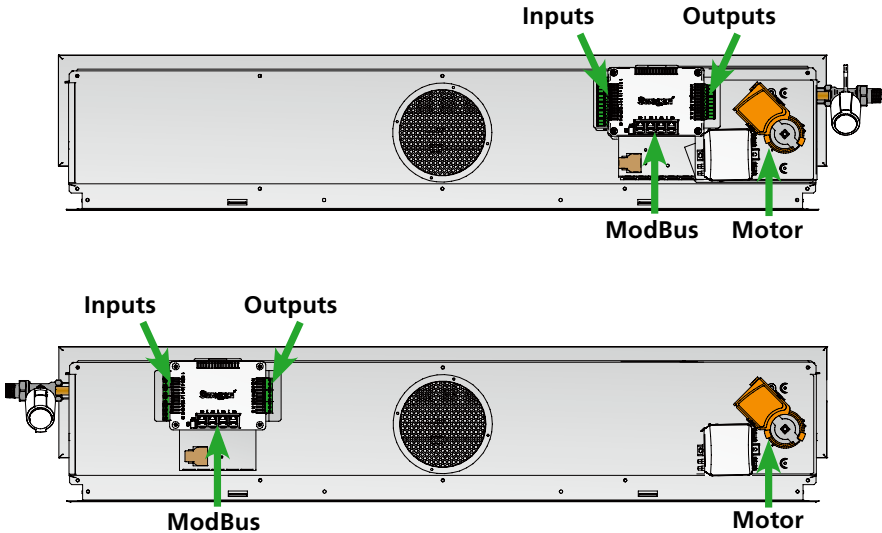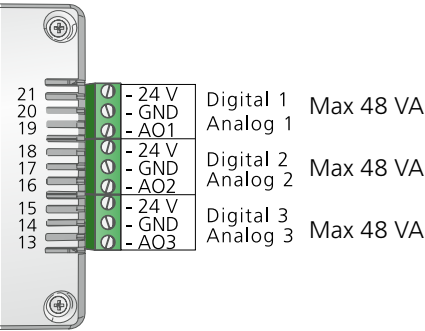



Room controller, LOCUS

Main menu and explanation of symbols

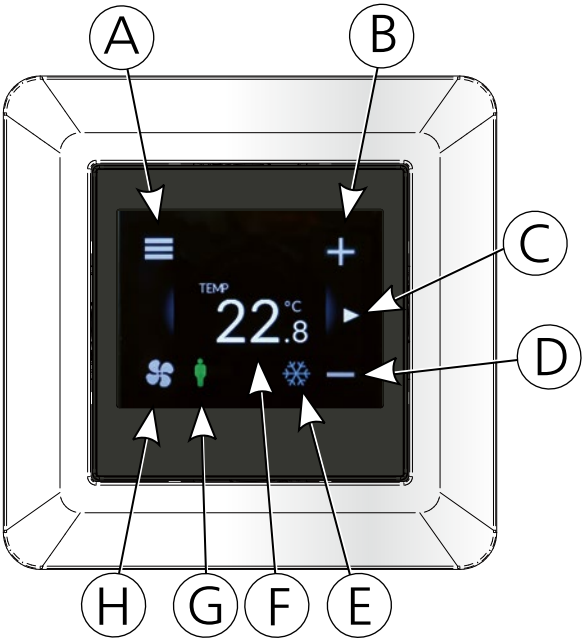

- A. menu
- B. increase
- C. swipe left to go to the next page
- D. decrease
- E. symbol showing ongoing cooling or heating
- F. shows programmed setpoint or measured temperature
- G. shows occupancy in the room
- H. press to activate boost flow

Technical data

Display	Capacitive touch TFT Display QVGA 2.3"
Screen resolution	320x240
Communication	Modbus RTU via RS-485
Temperature sensor	Internal 10K NTC sensor
Operating temperature	+5 ... +40°C
Degree of protection	IP20
Dimensions	88 x 88 x 35 mm
Operating voltage	12-40 VDC
Current requirement	0.5 W

Connection

LOCUS	Connection	Description
VDD	RJ12	12-40 VDC power supply
A+	RJ12	RS-485 bus connection
B-	RJ12	RS-485 bus connection
GND	RJ12	Earth for 12-40 VDC power supply
Memory card slot		The user panel's software can be updated via a Micro SD card

Standards and directives

The following standards have been observed:

EC Directive:	93/68/EEC
Low Voltage Directive:	2014/35/EU
Machinery Directive:	2006/42/EEC
EMC Directive:	2014/30/EU
RoHS Directive:	2002/95/EC
Vibrations:	EN-60721-3-3

Description of display

If the screen is in standby mode, it is activated again by clicking.

Display	Description	Explanation
	Display in standby mode	Activated with a click
	Active main menu	Increase/decrease the setpoint temperature by clicking on the + or - signs
	Activated boost mode	
	Swipe left for next page	Shows values from connected sensors
	Swipe right to go back to the main menu	

For more detailed information about LOCUS room controller. See documentation at www.swegon.com

- LOCUS Product datasheet
- LOCUS Instructions for Use (IOM)

Sensor module

Menu sensor module:

Press and hold the left and right-hand buttons for five seconds to access the menu.

Use the left-hand button (⌘) to steps through the menus. Use the right-hand button (↵) to confirm your selection.

Press the left-hand button and select:

1. Alarm list
2. Commissioning air
3. Commissioning water
6. Return to menu



Confirm selections by pressing the right-hand button

1. Alarm list: See the complete alarm list to the right. In the commissioning menus:

- Navigate between the menus by pressing the left-hand button
- Confirm selections by pressing the right-hand button
- When a selection has been confirmed, the blue LED will flash for about 60 seconds.
- In order to return to normal operation, select "no adjustment"

2. Commissioning, air:

2.1. Min. airflow, no occupants ☐ ☒ ☐ ☐ ☐ ☐

2.2. Min. airflow, occupancy ☒ ☐ ☐ ☐ ☐ ☐

2.3. Max. air flow, occupancy ☒ ☒ ☒ ☒ ☒ ☒

2.4. Min. airflow, holiday/longer period of no occupancy ☐ ☐ ☒ ☒ ☐ ☐

2.5. No adjustment ☐ ☐ ☐ ☐ ☐ ☐

3. Commissioning, water:


3.1. Open the chilled water valve ☒ ☒ ☒ ☐ ☐ ☐

3.2. Open heated water valve ☐ ☐ ☐ ☒ ☒ ☒


3.3. No adjustment ☐ ☐ ☐ ☐ ☐ ☐

4, 5 are not used

6. Return to menu

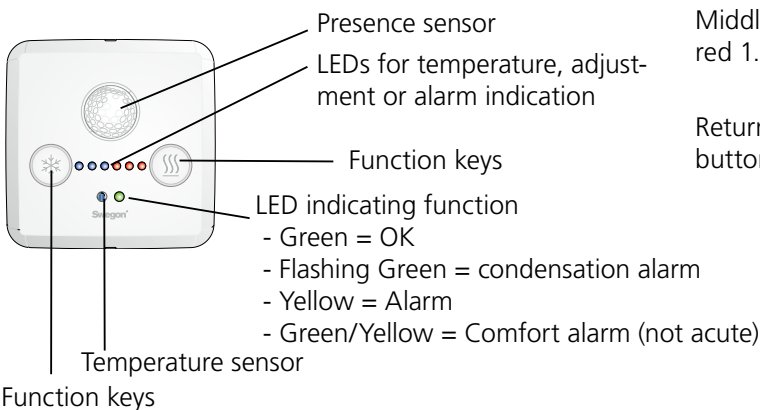

3 parallel RJ12 ports (Modbus) for connections e.g. controller, additional sensor module or PC with the help of Cable converter USB-RJ12

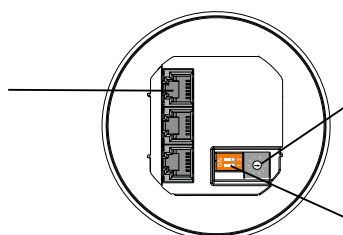

Alarm list for the sensor module

Alarm no.	Type of alarm
Alarm 1	Supply voltage low
Alarm 2	Supply voltage critical low
Alarm 3	Ext temp missing
Alarm 4	Ext temp error
Alarm 5	Condensation sensor error
Alarm 6	SM temp sensor error
Alarm 7	SM button error
Alarm 8	CO ₂ sensor missing
Alarm 9	VOC Error
Alarm 10	Low pressure
Alarm 17	SM comm error
Alarm 18	Slave comm error
Alarm 19	Pressure sensor comm error
Alarm 20	VOC sensor comm error
Alarm 21	No master request (slave)
Alarm 22	Slave incompatible version
Alarm 25	Heating comfort alarm
Alarm 26	Cooling comfort alarm
Alarm 27	Temp. Set point overlap alarm
Alarm 28	Air quality comfort alarm
Alarm 29	Condensation
Alarm 33	24 V Out 1 overload error
Alarm 34	24 V Out 2 overload error
Alarm 35	24 V Out 3 overload error
Alarm 41	Slave input sum alarm
Alarm 42	Slave output sum alarm

32	16	8	4	2	1
					●
				●	
				●	●
			●		
			●		●
			●	●	
			●	●	●
		●			
		●			●
		●		●	
		●			
	●				●
	●			●	
	●				●
	●		●		
	●		●	●	
	●	●			●
	●	●		●	
	●	●	●		●
●					●
●				●	
●				●	●
●		●			●
●		●		●	

The alarm is shown with a number of LEDs when you select Alarm list (1) in the menu.

Each LED represents a number as per the table above and the numbers are added to form an alarm number.

E.g. Middle blue and the two last red are lit (xoxoo)

Middle blue corresponds to 16, next last red 2 and last red 1. The sum of these is 19, which is the alarm number.

Return to normal operation by pressing the right-hand button.

Addressing the sensor module. 10 sensor modules can be connected to each master unit, each one must have a unique address to work.

Switch for termination resistance. On the last sensor module in the circuit switch 1 is set to On.

Recommendation for electrical installations

- Swegon recommends that all electrical installations are carried out by a qualified electrician.
- Swegon recommends that a 24 V power supply is connected with a 1.5 mm² copper cable to minimise the risk of voltage drops in the case of long cable runs.
- Swegon recommends the use of Swegon-marked transformers for supplying power to Swegon's products

Voltage drop table at different loads (amperes) with a 1.5 mm² cable

Metres (m)	Current/Amperes					
	1	2	3	4	5	6
10	0.24	0.48	0.72	0.96	1.20	1.44
20	0.48	0.96	1.44	1.91	2.39	2.87
30	0.72	1.44	2.15	2.87	3.59	4.31
40	0.96	1.91	2.87	3.83	4.78	5.74
50	1.20	2.39	3.59	4.78	5.98	7.18
60	1.44	2.87	4.31	5.74	7.18	8.61
70	1.67	3.35	5.02	6.70	8.37	10.05
80	1.91	3.83	5.74	7.65	9.57	11.48
150	3.59	7.18	10.76	14.35	17.94	21.53
160	3.83	7.65	11.48	15.31	19.13	22.96

The largest permitted voltage drop is 3.6 V

Description of problem:

Swegon's electrical units and machines are designed to work within specific voltage intervals. If the voltage drops below the nominal value, this can lead to impaired performance or even damage to the equipment.

Voltage drops also entail increased resistance in cables and components, which generates heat. This heat represents a loss of electrical energy. Depending on the voltage drop, the energy losses can be significant.

A general guideline for a 24 V system is that a 15% voltage drop is acceptable (3.6 volts).

How is the voltage drop in the cable calculated:

Resistance (R) = (Resistivity (p) x Length (L)) / Area (a).


Voltage drop in wire (UL) = Resistance (R) x current (I)

$$R_1 = \frac{p \cdot L}{a}$$

$$R_2 = \frac{p \cdot L}{a}$$

$$R = R_1 + R_2$$

$$UL = R \cdot I$$

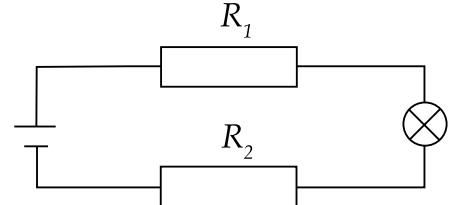

For example, the resistivity for copper is 0.0175 ohm mm²/m at 15°C. Bear in mind that the resistance increases by 0.4% per degree Celsius.

Examples of voltage drops in cables:

Input data	value	Unit
Supply voltage	24	Volts
Current (load)	1.25	Amperes
Cable area	1.5	mm
Cable length (phase + neutral wire)	50	M



Voltage drop	1.5	Volts
--------------	-----	-------

Example 1 at 22°C

Input data	value	Unit
Supply voltage	24	Volts
Current (load)	1.25	Amperes
Cable area	1.5	mm
Cable length (phase + neutral wire)	200	M



Voltage drop	6	Volts
--------------	---	-------

Example 2 at 22°C

Maintenance

